


CoreSync Emergency Lighting Bypass >

The CoreSync Emergency Lighting Bypass is a UL924-compliant solution for operating emergency light fixtures controlled on a Molex CoreSync PoE network.

The CoreSync Emergency Lighting Bypass receives both a PoE input and emergency power from a Life Safety power source. During normal operation, PoE power from a Molex PoE Gateway passes through the Module, enabling routine CoreSync control of an emergency-designated fixture.

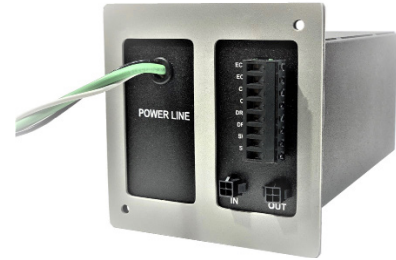

In the event of an emergency, such as power failure, PoE power source failure or disconnection of cabling, the Module will bypass normal PoE control and activate the emergency power source and onboard LED driver. The fixture will be powered to full brightness irrespective of previous state/control. Once the emergency condition is cleared, the lighting system will resume normal operation and the fixture will revert to the previous CoreSync control state. The Emergency Lighting Bypass also provides inputs for testing and fire alarm connection.

FEATURES AND ADVANTAGES

| | |
|---------------------------------------|--|
| CoreSync enabled | Low voltage PoE infrastructure for power, control, communication |
| Easy mounting | Allows mounting on standard 4x4 junction box |
| CoreSync daisy-chain compatible | Enables connection and interaction on the CoreSync bus |
| Available in a range of power outputs | Provides flexibility across a wide variety of fixture types |
| Powered by building emergency source | High reliability; no local batteries required; reduced maintenance |
| No auxiliary PoE port needed | Optimized and cost effective PoE infrastructure utilization |
| UL 924, CSA C22.2 No 141, FCC Class A | Meets agency standards for safe operation and reliability |
| NFPA (NEC, Life Safety Code) IBC | Compliant with important building safety requirements |

SPECIFICATIONS

Commercial Standards

UL924, CSA, CSA C22.2 No 141;

FCC Class A

NFPA (NEC, Life Safety) IBC

Environmental

Ambient Operating Temp:

0-40°C (32 to 104°F)

Humidity:

10-80% Non-condensing

Environmental Rating: Indoor

Mechanical

Fire Alarm:

Contacts: normally open (N.O.)

Test Button:

Push to ON with illuminated LED.

Push button is not included in the product and it is optional.

Nominal Dimensions:

4 x 4 x 6.5 inches

101.6 x 101.6 x 165.1 mm

Electrical

EM input: 110-277VAC,

Output: 12-42VDC up to 1050mA


Standby PoE Power: 1W

CoreSync Bus I/O:


42-57VDC; IEEE 802.3xx power compliant

CoreSync Emergency Lighting Bypass

CONNECTION DIAGRAM

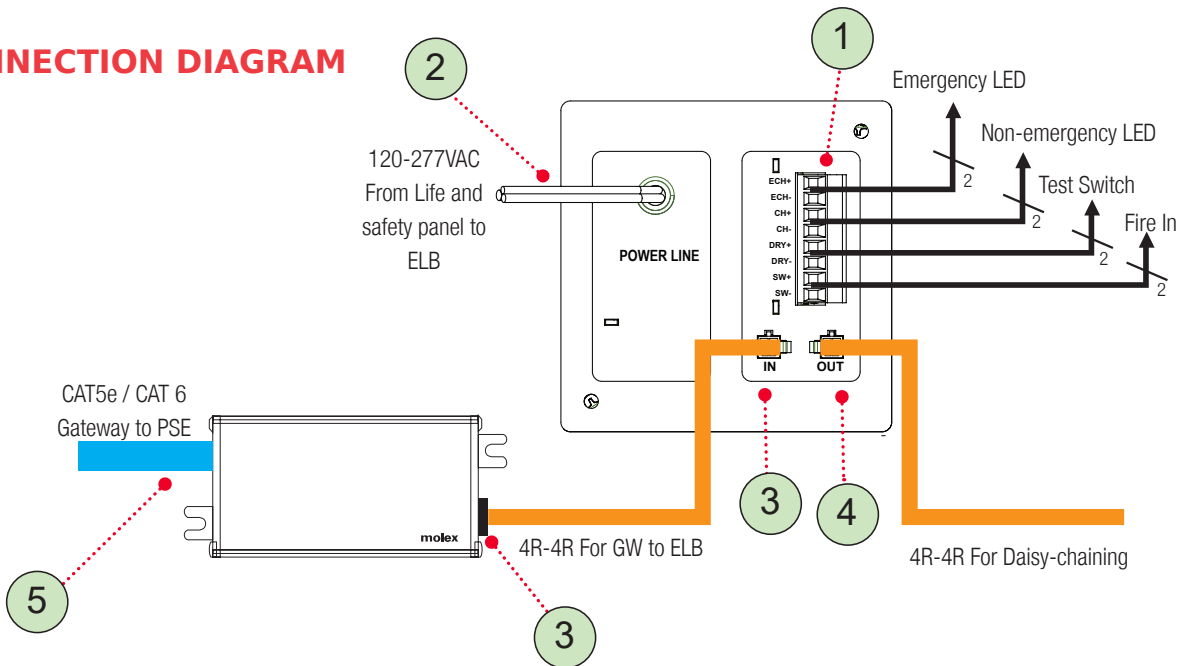

| | |
|---|--|
| 1 | Connection to LED load, fire alarm and test switches |
| 2 | 120-277V AC power from life safety panel to ELB |
| 3 | Molex harness from the PoE gateway to the panel mount micro-fit input on the ELB |
| 4 | From the panel mount micro-fit output connector on ELB to the next CoreSync device in the daisy-chaining |
| 5 | Cat 5e / Cat 6 PoE input from the PoE switch (PSE) to the CoreSync PoE gateway |

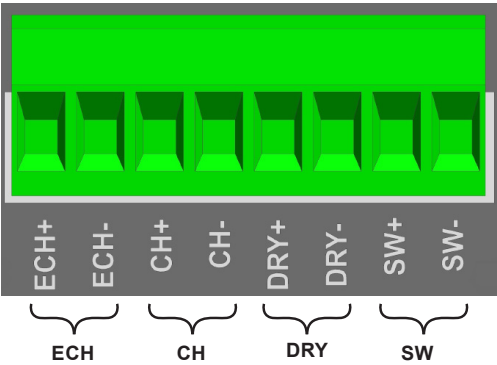

| | |
|-----|--|
| ECH | Constant Current LED Out to drive the emergency fixture |
| CH | Constant Current LED Out to drive non emergency channel (Only used with a tunable driver) |
| DRY | Connects to a dry contact emergency signal. DRY pins should only be connected the signal source and the DRY pins from other ELBs if required. |
| SW | Input for an illuminated low voltage push button used to simulate emergency operation. The LED stays on as long as PoE is present and turns off in case of emergency |


www.molexces.com/products/coresync/

CoreSync Emergency Lighting Bypass >

DESCRIPTION

| | |
|------------------|---|
| CoreSync Bus | The CoreSync Bus on the Emergency Lighting Bypass senses the presence of PoE power and daisy-chaining of other CoreSync devices such as sensors and drivers without disrupting the flow of operation. |
| Test Switch (SW) | Test Switch input allows for a pushbutton to test and simulate emergency operation. The Test switch is not included in the Emergency Lighting Bypass and would be purchased separately and installed on site. |
| Fire Alarm (DRY) | The Fire Alarm input connects to a normally open dry contact signal for integration with the fire alarm system. On activation, the module changes to emergency mode, turning on the luminaire to maximum brightness. Connecting a Fire Alarm input is optional. |
| LED Out (ECH) | This is a constant current output: LED+ and LED- drive an emergency LED luminaire. |
| Emergency Power | 110 -277 VAC emergency power; for powering the luminaire in case of emergency. |

TIMING DIAGRAM

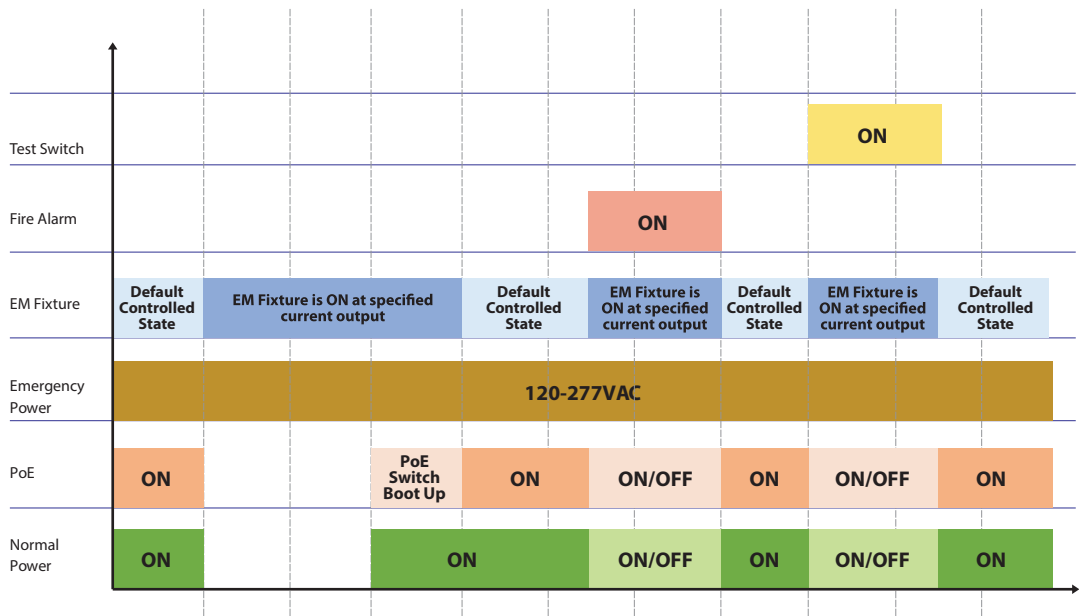

www.molexces.com/products/coresync/

CoreSync Emergency Lighting Bypass >

OPERATION

The Emergency Lighting Bypass (ELB) differentiates between emergency and normal operation mode by monitoring power on the CoreSync bus.

During normal operation, the emergency light fixture is driven by a CoreSync LED Driver inside the ELB which powers and controls the fixture using CoreSync PoE.


In the event of power failure, the relay bypasses control and switches to Emergency power, turning the fixture on to the specified current output for maximum brightness.

When normal power is restored, the relay switches back to CoreSync operation mode as soon as CoreSync power is available.

The fire alarm input is connected to the fire alarm system. Upon activation, the Module forces the fixture to turn on 100% irrespective of the mode of operation.

If an optional test button switch is installed, the module can be routinely tested to simulate emergency operation per the building requirements.

INSTALLATION HIGHLIGHTS

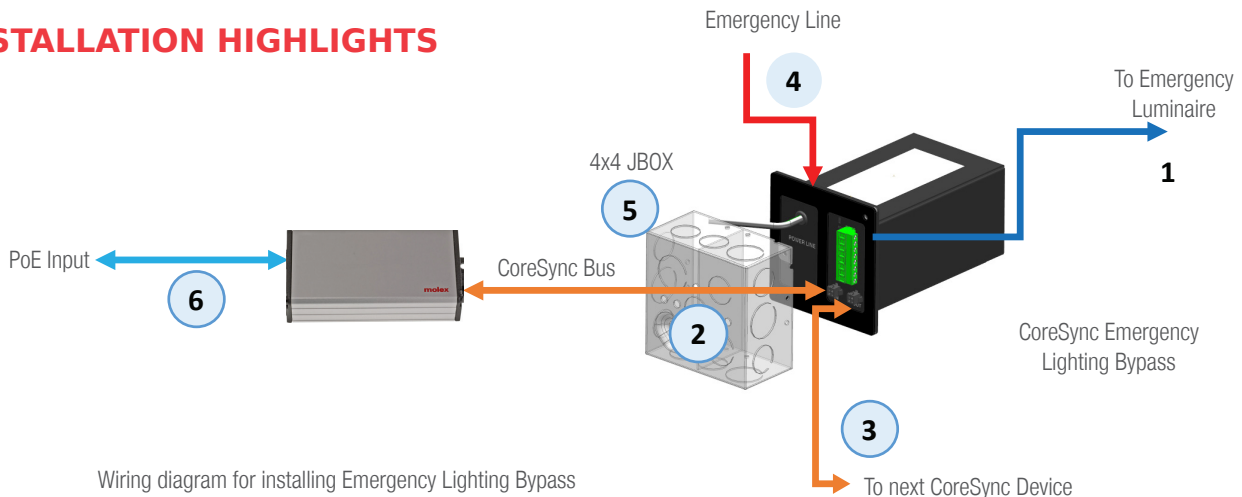

INSTRUCTIONS HIGHLIGHTS

Important

Do not connect the PoE input or emergency line until Steps 1 through 3 are complete

Connect LED+ and LED- from emergency luminaire to "ECH+/ECH-" of Emergency Lighting Bypass through the junction box knock out. If using a dual channel ELB and luminaire, connect the CH+/CH- to the second LED channel. Connect the test switches and Fire alarm inputs to the appropriate pins if required,

Connect the CoreSync Bus harnesses to the CoreSync Bus input through the junction box knock out.

Connect the CoreSync Bus harnesses to the CoreSync Bus output through the junction box knock out and connect another CoreSync Device in Daisy-Chain.

Connect the Emergency Line Power to the emergency input on the Emergency Lighting Bypass.





Mount the Emergency Lighting Bypass to the junction box. Use appropriate dividers for high voltage and low voltage separation.

Connect PoE power to Gateway using Cat 5e or better Ethernet cable, to power the fixture

www.molex.com/products/coresync/

CoreSync Emergency Lighting Bypass >

MECHANICAL DIMENSIONS

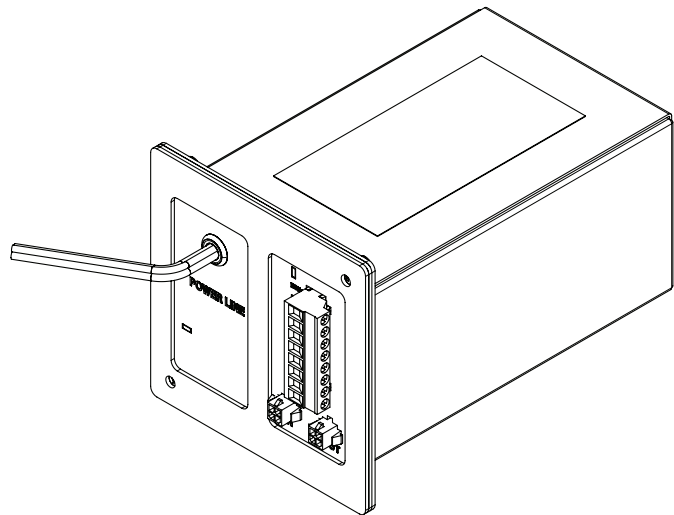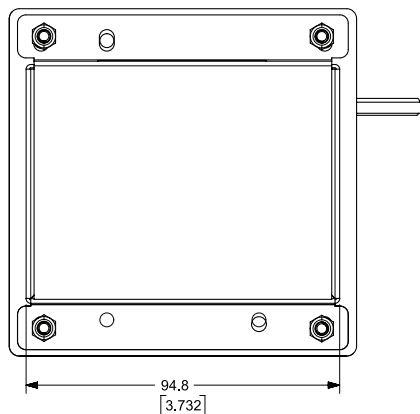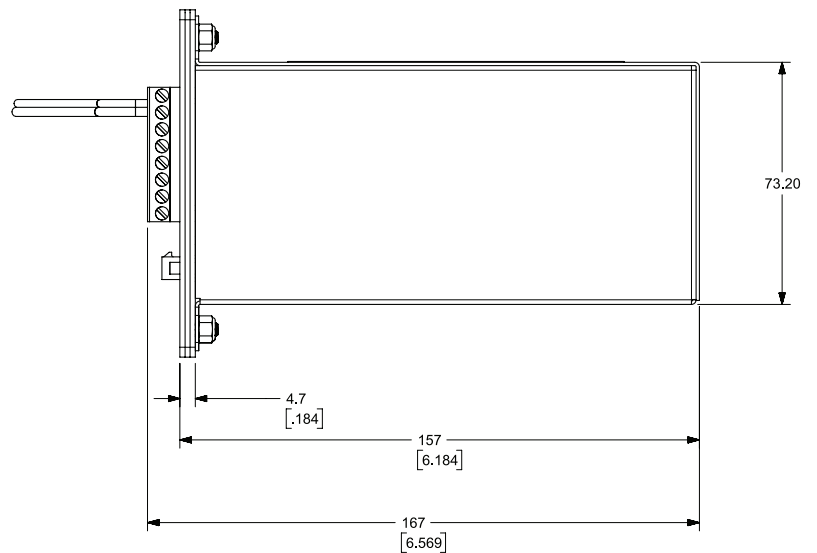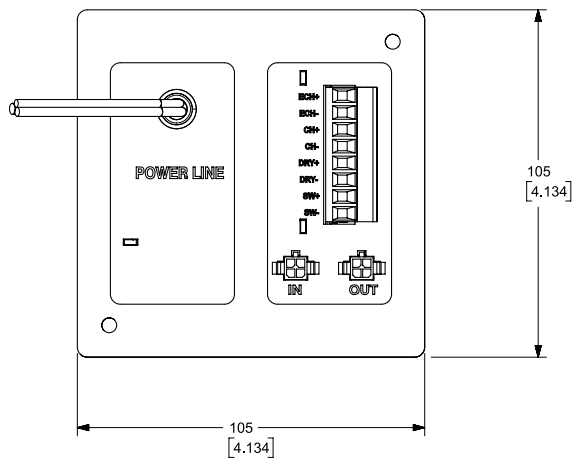

www.molex.com/products/coresync/

CoreSync Emergency Lighting Bypass >

ORDERING INFORMATION

| Order No. | Description | <p>Note: 1. CoreSync Driver can be high-end trimmed for desired current output during the normal operation. The device will produce a full brightness output during the emergency operation 2. Programmable in 10mA increments, using CoreSync Programming Kit No. 180788-1000</p> |
|-------------|--|--|
| 182131-1207 | CoreSync Emergency Lighting Bypass, 300S | |
| 182135-1201 | CoreSync Emergency Lighting Bypass, 350S | |
| 182135-1202 | CoreSync Emergency Lighting Bypass, 500S | |
| 182135-1203 | CoreSync Emergency Lighting Bypass, 700S | |
| 182135-1206 | CoreSync Emergency Lighting Bypass, 880S | |
| 182135-1204 | CoreSync Emergency Lighting Bypass 1050S | |
| 182135-1217 | CoreSync Emergency Lighting Bypass, 300D | |
| 182135-1211 | CoreSync Emergency Lighting Bypass, 350D | |
| 182135-1212 | CoreSync Emergency Lighting Bypass, 500D | |
| 182135-1213 | CoreSync Emergency Lighting Bypass, 700D | |
| 182135-1216 | CoreSync Emergency Lighting Bypass, 880D | |
| 182135-1214 | CoreSync Emergency Lighting Bypass 1050D | |

STANDARD OFFERING

| TYPE: | PN: | DESCRIPTION: |
|---|---------------------|------------------------|
| 4R-4R | CSH- XA0B-AA | 4R-4R 0.5m |
| | CSH- XA01-AA | 4R-4R 1m |
| | CSH- XA03-AA | 4R-4R 3m |
| | CSH- XA05-AA | 4R-4R 5m |
| | CSH- XA10-AA | 4R-4R 10m |
| | CSH- XA25-AA | 4R-4R 25m |
| | CSH- XA50-AA | 4R-4R 50m |
| 4R-4P | CSH- XB0B-AA | 4R-4P 0.5m |
| | CSH- XB01-AA | 4R-4P 1m |
| | CSH- XB03-AA | 4R-4P 3m |
| 4R-4P Mount Plenum | CSH- XC0B-AA | 4R-4P Panel Mount 0.5m |
| | CSH- XC01-AA | 4R-4P Panel Mount 1m |
| | CSH- XC03-AA | 4R-4P Panel Mount 3m |
| 4P-4P | CSH- XD0A-AA | 4P-4P 0.25m |
| 10R-4R | CSH- XE01-AA | 4P-4P 1m |
| | CSH- XE05-AA | 4P-4P 5m |
| Substitute X and AA to specify: X : P = Plenum, B = B2ca, E = Eca AA : BK = Black, WH = White | | |

www.molex.com/products/coresync/