
CoreSync MechoShades Gateway



INSTALLATION INSTRUCTIONS



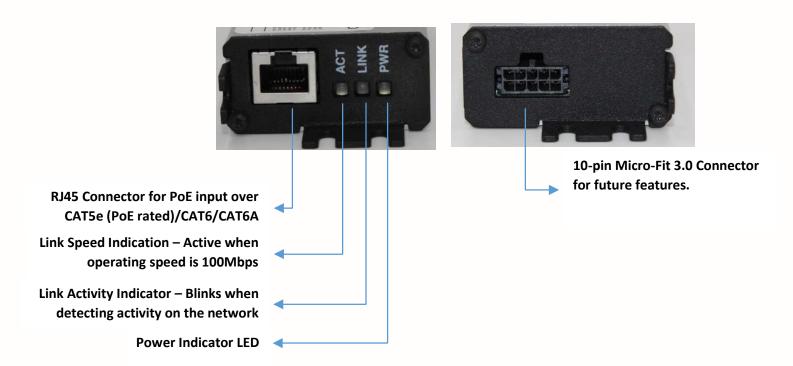

Order No.	Description
1809931001	CoreSync MechoShades Gateway

Molex is a registered trademark of Molex, LLC in the United States of America and may be registered in other countries; all other trademarks listed herein belong to their respective owners

CoreSync MechoShades Gateway



INSTALLATION INSTRUCTIONS

CAUTION AND WARNING: 1.

- Read and follow all safety instructions.
- Observe precautions for handling electrostatic sensitive Gateways.
- Risk of electric shock. Do not handle an energized Gateway with wet hands or when standing on wet or damp surfaces.
- Warranty voided if Gateway has been modified from its original configuration.
- Do not use outdoors.
- Use only with Class 2 Power Unit 60VDC maximum.
- Suitable for damp locations.
- Gateway has internal over-temperature protection, but do NOT hot swap. Always de-energize the Gateway before plugging or unplugging the 10-pin Micro-Fit 3.0 connector from the Gateway's output.
- Maximum ambient temperature of 40°C.
- Installation location is recommended to be accessible for future troubleshooting.
- This product should only be serviced by a CoreSync Certified Technician.
- UL 2108 listed, Certified to CAN/CSA standard C22.2 No. 250.13, Plenum rated (metal enclosure only).

GATEWAY MUST BE INSTALLED BY A CORESYNC CERTIFIED TECHNICIAN OR QUALIFIED ELECTRICIAN (CHECK WITH LOCAL AND NATIONAL CODES FOR PROPER INSTALLATION)


Molex is a registered trademark of Molex, LLC in the United States of America and may be registered in other countries; all other trademarks listed herein belong to their respective owners




2. **PROCEDURES:**

Step 1: Refer to the dimensions and mounting patterns below to mount the MechoShades Gateway.

Dimensions for CoreSync MechoShades Gateways:

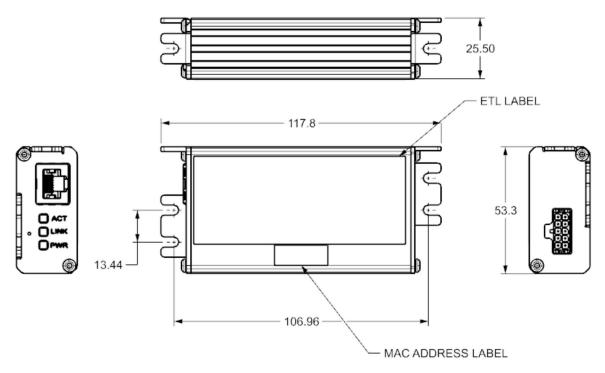

Mounting pattern for CoreSync MechoShades Gateways:

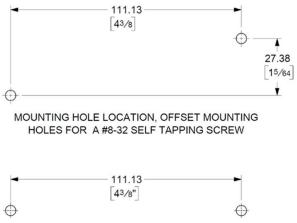

Molex is a registered tradem

registered in other countries; all other

 
trademarks listed herein bel MOUNTING HOLE LOCATION, VERTICAL/CENTER MOUNTING ENGINEERING RECORD NO. 749648 DOCUMENT NO. 187000575

CoreSync MechoShades Gateway



INSTALLATION INSTRUCTIONS

Step 2. Use two #8 self-tapping screws to mount the PoE Gateway as shown (screws not provided).



Step 3. On the front top side of the PoE Gateway connect the PoE CAT cable until you hear a "CLICK". Use a UTP (unshielded twisted pair) CAT5E (PoE rated), CAT6, or CAT6A cable*. The maximum length of cable should not exceed 100 meters. 90 meters or less is recommended. Refer to the CoreSync Harness Length Calculator if necessary.



*Please note the Power LED indicator will turn on once you have power. The LINK and ACTIVE indicators will blink on and off rapidly once you have network connection.

- LEGAL DISCLAIMER -

The author has made every attempt to ensure the accuracy and reliability of the information provided in this document. However, the information is provided "as is" without warranty of any kind. Molex does not accept any responsibility or liability for the accuracy, content, completeness, legality, or reliability of the information contained in this document.

This document is provided to you solely for your own personal use and may not be used for resale, distribution, public display or performance or other similar uses by you. The materials in this document as well as its photographs, images, layout, organization and design are copyrighted and are protected by worldwide copyright laws and treaty provisions. Trademarks, logos and service marks displayed on this site are registered and unregistered trademarks of Molex, its licensors or content providers, or other third parties. All of these materials, trademarks, logos and service marks are the property of their respective owners.

Molex Connected Enterprise Solutions >



Molex is a registered trademark of Molex, LLC in the United States of America and may be registered in other countries; all other trademarks listed herein belong to their respective owners