


**Installation Procedures**

1. Secure panel at top of compactLAN enclosure.
2. Route fibre cable into compactLAN enclosure, ensuring bend radii on cable are within manufacturers tolerance.
3. Strip jacket back to reveal approximately 1metre of the bare fibre.
4. Secure jacket to the cable jacket tie down point (indicated) in the panel utilising cable ties (provided).
5. Remove securing nut on strength member clamp, loop strength member through slot and tightly screw nut down.
6. Secure slack fibre in management loops.
7. Route slack fibre to adapters and trim to length.
- 8 Terminate as normal.
9. Test as normal.

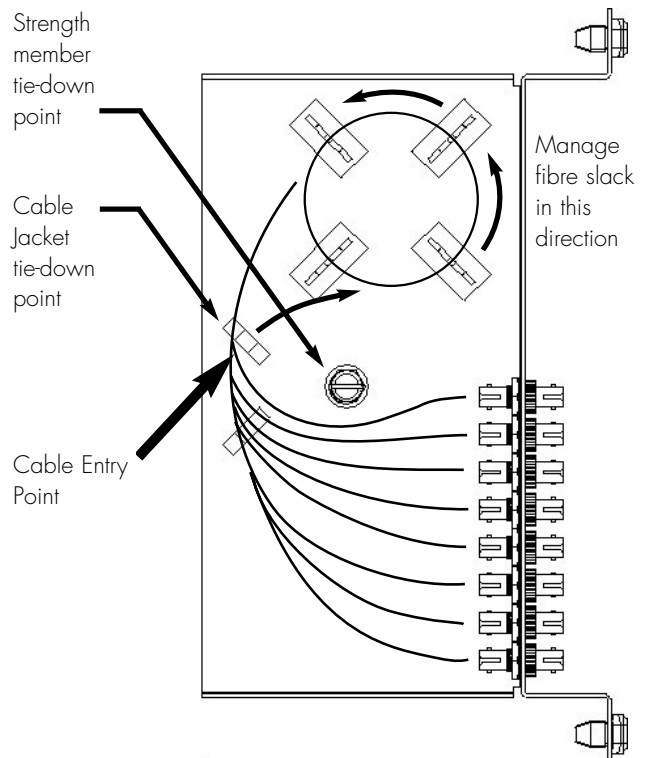

**MOLEX PREMISE NETWORKS**

**Molex Premise Networks  
Corporate Headquarters**  
Tel: 1 866 733 6659  
www.molexpn.com

**European  
Headquarters**  
Tel: 44 (0) 1489 572111  
www.molexpn.co.uk

**Pac Rim  
Headquarters**  
Tel: 61 3 9971 7111  
www.molexpn.com.au

**Molex  
Incorporated**  
Tel: 630 969 4550  
www.molex.com