# <u>molex</u>

BEFORE INSTALLING OR ADJUSTING THIS PRODUCT, PLEASE READ THESE INSTRUCTIONS CAREFULLY. PLEASE KEEP THIS GUIDE FOR FUTURE REFERENCE

## STREAMLINE WALLPLATE INSTALLATION INSTRUCTION

#### 1.0 SCOPE

This document will describe the installation instructions for straight 1P, 2P, 4P & Angled 1P,2P Streamline wall plates.

#### 2.0 PROCEDURE:

#### 2.1 ASSEMBLY INSTRUCTIONS

#### 2.1.1 1P WALL PLATE:

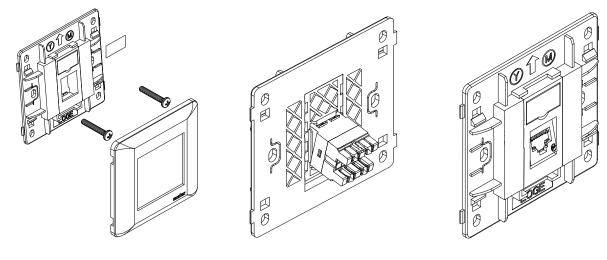
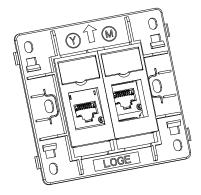


FIG. 1

2.1.2 2P WALL PLATE:



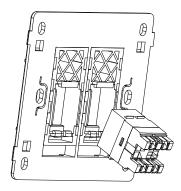


FIG. 2

ENGINEERING RECORD	SAP NO: <b>187000426</b>	Doc No: <b>AS-18700-120</b>	Doc part: AS			
NO: 630008		http://www.molexces.com		REV- <b>B</b>		
MPN/FMT-042 (2019/DEC/23 REV-03). THIS INFORMATION IS CORRECT AS AT THE TIME OF PUBLICATION. SPECIFICATION ARE SUBJECT TO CHANGE. SHEET No. 1 of 3						

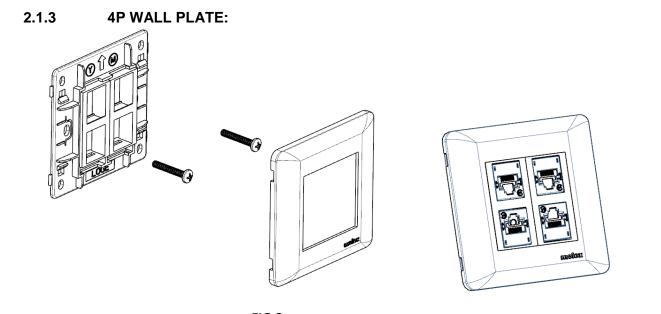


FIG.3

# 2.1.4 1P ANGLED WALL PLATE

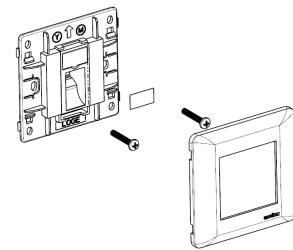


FIG.4

2.1.5

**2P ANGLED WALL PLATE** 

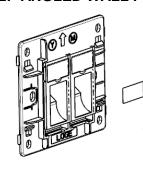




FIG.5


ER NO: 630008	SAP NO: <b>187000426</b>	Doc No: <b>AS-18700-120</b>	Doc part: AS	REV- <b>B</b>
MPN/FMT-042 (2019/DEC/23 REV-03).				SHEET No. <b>2</b> of <b>3</b>

## 2.2 ASSEMBLY INSTRUCTIONS FOR ALL THE WALL PLATES (FIG. 1, 2,3,4 & 5):

1. Hold the wall plate so the arrow on the base is pointing up.

2. Install the jack from the back of the wall plates - engage the two latches at the bottom of jack with the latches provide in the Wall plate jack holder and press it until you get click sound

- 3. Mount the wall plate using screws.
- 4. Put the wall plate cover to the base.
- 5. Insert the wall plate label inside the label holder and lock it (Not applicable for 4P wall plate).

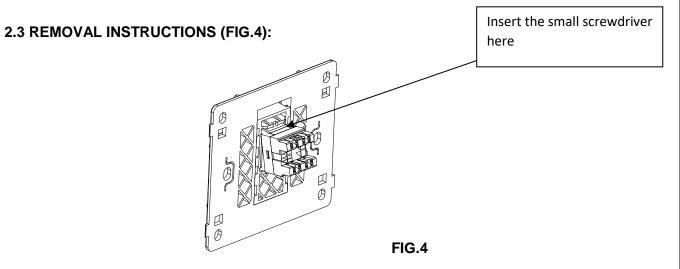

1. Place the tip of a small screwdriver between the large tab and the edge of the plate and gently pry upwards.

2. Lift the jack up

#### 2.4 FIXING THE WALLPLATE ON THE WALL / GANGBOX

- 1. Remove the cover from the Wall plate.
- 2. Fix the screws provided with the pack and screw it tight to the wall / gang box.
- 3. Fix the frame back on the Wall plate.

ER NO: 630008	SAP NO: <b>187000426</b>	Doc No: AS-18700-120	Doc part: AS	REV- <b>B</b>
MPN/FMT-042 (2019/DEC/23 REV-03).				SHEET No. 3 of 3