

Splice Tray MFE 24 fiber Installation Instructions

1.0 SCOPE

This document provides installation instructions for the Splice Tray MFE 24 Fiber.


2.0 PRODUCT DESCRIPTION

AFR-00470 - Splice Tray MFE 24 (2 x 12) fiber.


3.0 INSTALLATION PROCEDURE




Place thumb and first finger in lid cutouts and flex lid up at center to release.

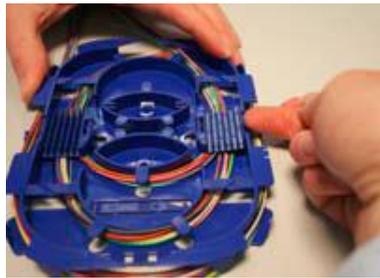


Use finger nail or tapered end of fiber pick on splice holder tab to lift and pivot upwards.

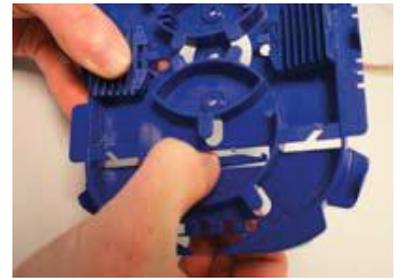


To remove fiber pick press down firmly on pick before mounting tray.

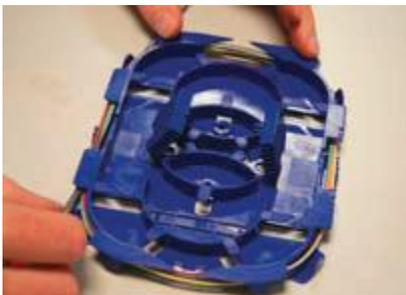

External pathway routing

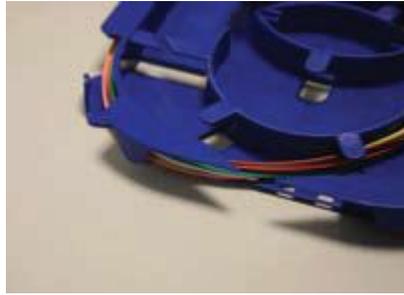

Fiber entry via external pathway

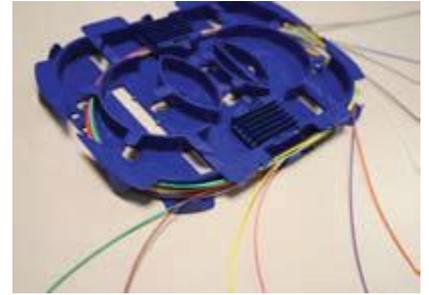


Multi-directional fiber entry / exit

EC/ECM NO: 116009	SAP NO : 187000521	Doc No: 187000521 Doc part: AS	REV- A
SAP EC NO: 10835882	http://www.molexces.com/		DATE: 2017/MAY/22



Routing around splice holders

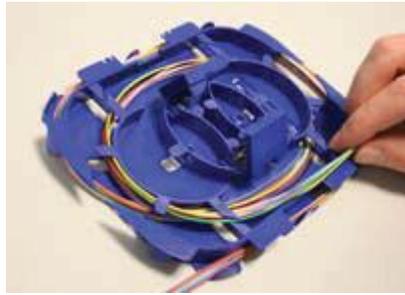

Routing underneath splice holder area



Cross routing / direction change



Storing fiber pick

Secure lower portion of hinge to each individual tray before joining trays together.

